

BUCKINGHAM MFG.

BuckHorn Change Out Instructions

Warning: Do not use this product if you cannot understand and follow the instructions and warnings that come with it and complete all necessary functions. Please consult with your physician prior to using this product. Do not use this product under the influence of drugs or alcohol.

Instructions for Changing the WebGrab BuckHorn Location.

The EZSqueeze comes standard with the WebGrab BuckHorn installed on the WebGrab such that it is facing up when the EZSqueeze is installed on the pole with the WebGrab on your left side as you face the pole. The instructions below outline the procedure to install the WebGrab BuckHorn on the WebGrab so it is facing up when the EZSqueeze is installed on the pole with the WebGrab on your right side as you face the pole.

- Disconnect the Serrated Rotosnap from the WebGrab cam eye of the outer strap (Fig 1).
- Using a 3/16" hex wrench, loosen and remove the 5/16" button head cap screw that secures the WebGrab BuckHorn to the WebGrab body (Fig 2a-2b). Retain the removed button head cap screw for re-assembly.
Note: The 5/16" button head cap screw is supplied from the factory with a nylon patch to prevent loosening. This screw may be re-used as long as the nylon patch remains on the screw threads.
- Remove the WebGrab BuckHorn (Fig. 3).
- Flip entire Outer Strap assembly over so the WebGrab is now positioned on your right side (Fig 4).
- Position the WebGrab BuckHorn onto the WebGrab body as shown (Fig. 5). Note: The center hole in the WebGrab BuckHorn is designed to slip over the WebGrab cam bolt and nut when installed in the WebGrab (Do Not Remove the Cam Bolt or Nut).
- Install the 5/16" button head cap screw with nylon patch through the WebGrab BuckHorn and into the WebGrab body (Fig 6).
- Using a 3/16" hex wrench tighten the 5/16" button head cap screw securing the BuckHorn to the WebGrab (Fig 7) (Do Not Over Tighten).
- Re-connect the Serrated Rotosnap to the WebGrab cam eye (Fig. 8). The EZSqueeze is now ready for use with the WebGrab on the right side of the pole as you face it (Fig. 9).



Fig. 1



Fig. 2a



Fig. 2b

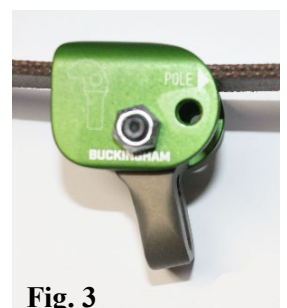


Fig. 3

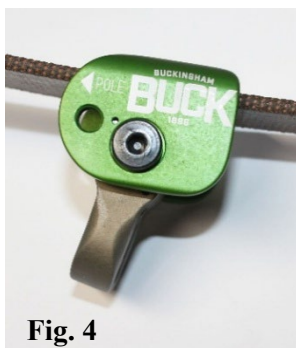


Fig. 4



Fig. 5

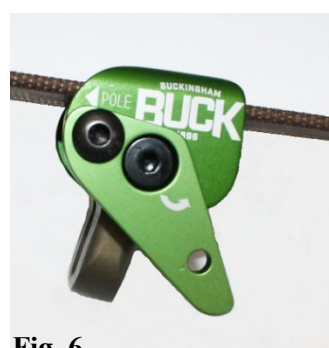


Fig. 6



Fig. 7



Fig. 8



Fig. 9

BUCKINGHAM MFG. CO.
BINGHAMTON, NY
www.buckinghammfg.com
1-800-937-2825

STATEMENT of OBSOLESCENCE:

Precise “useful life expectancy” or “shelf life” for this product is not specified, as the degree of use, conditions of use, and the degree of care and storage determines useful life. All users maintain responsibility to select proper equipment for the job, be properly trained in its use, and ensure all personnel support equipment passes inspection before each use. Upon evidence of defects, damage or deterioration, all equipment shall be removed from service immediately and tagged or marked as unusable or destroyed. Additionally, all equipment shall be inspected on a regular basis not to exceed one year by a Competent Person, as defined by OSHA/ANSI, to verify that the equipment is safe for use. In the event of any question or concern regarding the condition of such equipment, users shall remove the equipment from service for further inspection. All users must comply with OSHA/ANSI/ASTM standards prior to and in using such equipment. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

INTERNATIONAL USERS:

Notwithstanding the above, please know that certain international jurisdictions require manufacturers of equipment to provide customers with a maximum useful lifespan (sometimes referred to as a “Statement of Obsolescence”). To the extent required, Buckingham personal protective equipment manufactured from synthetic fiber materials including but not limited to items such as webbing and/or rope are subject to a maximum useful lifespan of ten (10) years from the date of manufacture. As stated above proper usage, storage, maintenance, and care impacts the useful lifespan of equipment. Extreme circumstances may require that product must be retired after only one use. This statement is made in conformance and compliance with BS EN 365:2004. International users must ensure that product inspections are completed by Competent Persons as defined by international standards including but not limited to British Standard (“BS”). If equipment fails any inspections, it must be immediately withdrawn from service and destroyed. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

OUR GUARANTEE:

We guarantee the equipment we manufacture to be free from defects in material and workmanship. We will repair any equipment deemed to be defective which is returned to us by the original purchaser. However, this guarantee is void if any product is changed or altered in any way, or if the product is used in a manner other than for which it is intended. This express guarantee supersedes all other expressed or implied guarantees, obligations or liabilities. There are no implied warranties of merchantability or fitness for a particular purpose and as such, all implied warranties are specifically disclaimed.

LIMITATION ON LIABILITY:

In no event will Buckingham or buyer be liable to the other for lost revenues, lost profits or any other indirect, consequential, special or punitive losses or damages, however caused, whether in action for breach of contract, strict liability, tort, or otherwise, even if advised of the possibility of such losses or damages. In no event will Buckingham’s liability exceed the total amount paid by the buyer to Buckingham for the product or equipment giving rise to such claim(s).

Please see other terms and conditions relating to this product at <https://buckinghammfg.com/terms-conditions/>

REGISTRATION:

Before use of the product, ensure to register and confirm the product at www.buckinghammfg.com/register.