

BUCKINGHAM MFG.

Instructions / Warnings

PN 9M8 & 92CM8 Series - Buck LeverJust™ Adjustable Positioning Lanyard (APL)

Warning: Do not use this product if you cannot understand and follow the instructions and warnings that come with it and complete all necessary functions.

The **Buck LeverJust™** APL is available in 1/2" (12.7mm) Kernmantle rope (Fig. 1) and 11.65mm TrebleKern rope (Fig. 2) and 1/2" XTC rope (not shown)



Fig. 1



Fig. 2

Inspect Prior to Each Use: inspection should include but not be limited to the following:

Rope Inspection:

- Inspecting your rope should be a continuous process of observation before, during, and after each use.
- Inspect rope fibers for signs of excessive wear, burns, cuts, abrasions, kinks, knots, hockling, ice buildup, broken strands in any given area of the rope.
- If ice or snow build-up is noted, remove build-up prior to use by running the length adjusting device along the length of the rope. Ensure the length adjusting device is clean and free of packed snow or ice.
- Both outer and inner fibers contribute to the ropes strength. If either is worn, the rope will naturally be weakened. Open the rope strands and look for powdered fiber, which is one sign of internal rope wear.
- Inspect the rope for frayed strands and broken yarns. Check for pulled strands. A pulled strand should be re-threaded into the rope if possible, otherwise it may snag on a foreign object during use.
- Inconsistent texture or stiff areas can indicate excessive dirt / grit embedded in the rope or shock load damage. Check that rope has not become hard or compacted. A hard or compacted rope indicates reduced strength.
- Inconsistent diameter (flat areas, bumps, or lumps). This condition indicates core or internal damage from overloading or shock loading.
- With use, all ropes become dirty. Inspect for areas of discoloration that could have been caused by chemical contamination and may result in the rope becoming brittle or stiff.
- Inspect the thread or the stitched eye for discoloration that could have been caused by chemical contamination and may result in the thread becoming brittle.
- Glossy or glazed areas that generally indicate signs of heat damage.
- Rope stitching is free of defects. Stitched eyes must have a protective cover (shrink tube) over the stitching and the cover must not be damaged, missing or torn. (Fig. 3).
- Do not use lanyard that has the ropes warning center / core exposed.



Fig. 3


See below photo for examples of a variety of conditions indicated above that require product replacement:




Hockled Rope



Rope with a Pulled Strand

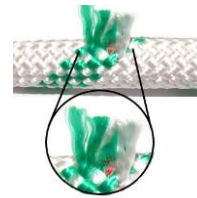


Rope with Broken or Cut Strands

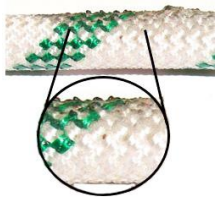

Melted / Glossy / Glazed Strands



Rope with Excessive Abrasion Wear

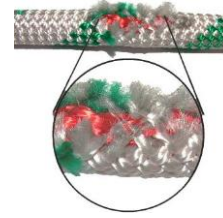


Rope with Warning Center (Red) Exposed

Snap Hook / Carabiner Inspection:

- Ensure locking device and keeper / gate operates freely and smoothly and that keeper / gate closes and remains closed and locked until intentionally opened.
- Inspect to ensure component is free of cracks, distortion, corrosion, or nicks.
- Ensure keeper / gate is not bent, is free of burrs, not packed with snow or ice, and is clean and functioning properly.

Buck LeverGrab™ Length Adjusting Device (LAD) Inspection:

- Unit is free of cracks – (usually depicted by fine jagged lines) and extensive wear or corrosion to cam, or housing.
- Lanyard is properly installed into LAD, snap end of lanyard exits the LAD with the anchor arrow facing the snap end (Fig. 4).
- Proper operation of mechanism by pivoting release lever back and forth. Movement must be unrestricted with no binding. Binding could be caused by burrs, packed snow, or ice.
- Ensure all bolts, nuts and screw are properly in place and tightened.

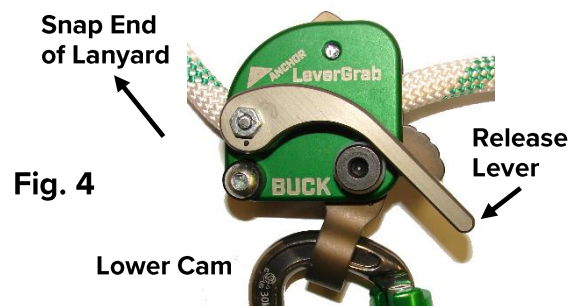

If any evidence of wear or deterioration as outlined above is observed, immediately cease use, destroy the product, and replace it with new equipment. Should any unusual conditions not outlined above be observed, or you have reasonable doubt about a particular condition, remove the equipment from service and notify your Supervisor, Safety Director, or contact Buckingham Mfg. Co. for clarification. Failure to carefully and completely inspect your equipment could result in serious injury or death.

Warnings:

- Know the job and the regulations governing performance requirements and select the proper equipment.
- Read carefully, understand, and heed these and all other included instructions, warnings, and cautions before using this equipment. Failure to do so could result in your serious injury or death. Should questions arise concerning the proper use or condition of your equipment, contact Buckingham Manufacturing Co. at 1-800-937-2825.
- All affixed labels / markings should be left in place / unaltered and all instructional material kept for future reference.
- This equipment is intended for use by properly trained professionals only.
- This product is designed to be used by a person with a maximum weight of 350 lbs. when fully equipped.
- For personal use only. NOT for towing or hoisting.
- Fall protection equipment, (i.e. fall arrest, work positioning belts, climbers, retrieval, suspension etc.) should not be resold or provided to others for re-use after use by original user as assurance cannot be granted that a used product meets criteria of applicable standards and is safe for use to a subsequent user.
- Be certain this equipment is suitable for the intended use and work environment. It should only be used as personal protection equipment (PPE). If suitability for intended use is in doubt, consult a safety engineer or contact Buckingham Mfg. before using.
- Destroy any and all equipment subjected to impact loading.
- Always attach each snap hook / carabiner of the Adjustable Positioning Lanyard to the proper D-ring of the body belt.
- Do not attach work positioning snap hooks / carabiner to accessory rings. Accessory rings are intended for attachment of a belt supporter only. Note: Belt supporters are intended to distribute belt weight of users who carry an unusually heavy load of tools. Belt supporters are not intended to support the weight of the user.
- As outlined by OSHA 1926.502 (e)(2) positioning devices shall be secured to an anchorage capable of supporting at least twice the potential impact load of an employee's fall or 3,000 lbf. (13.3 kN), whichever is greater. Additionally, reference ANSI Z359.2 anchorage requirements.
- Product is manufactured to meet the following standards / regulations as they are applicable: ASTM F887 / OSHA 1926.959 / CA. OSHA 2940.6 / ANSI Z359.3.
- The Adjustable Positioning Lanyard is only one component / element of a positioning system outlined by ASTM F887.
- Avoid contact of this equipment with sharp edged or pointed tools, high temperature surfaces, welding or other heat sources, electrical hazards or moving machinery. (Be aware of the lanyards position / placement on the pole or tree at all times in relation to the operations being performed. Use extreme caution when performing operations such as cutting, drilling, sawing, etc. Always perform this type of work well above the lanyard to avoid the potential of tool contact with the lanyard, causing damage which may result in a fall, serious injury or death).
- Never use these products where contact of the rope with sharp edges, corners or abrasive surfaces are likely. Sharp and abrasive surfaces may include but not be limited to (sheet metal, steel, concrete, block, stone, laminated materials etc.)
- Avoid exposing equipment to chemicals which may produce a harmful effect. Contact manufacturer if in doubt of damage by chemical exposure.
- Before each use check that your equipment is free of any defects such as burns, cuts, abrasions, kinks, knots, broken strands, chemical or physical exposures, cracks, charring, excessive wear, discoloration, swelling, loose, cut, or missing stitching. Remove from service, destroy and discard equipment if it does not pass this inspection and replace immediately.
- Guard against debris which could block the action of the cam (pebbles, twigs, ice, snow, etc.).

- If ice or snow buildup is noted, run the adjusting device along the length of the rope to remove the build-up and ensure the adjusting device is clean and free of packed snow or ice.
- Only Buckingham Mfg. Co., or those authorized in writing by Buckingham Mfg. Co., may make repairs to this equipment.
- Remove from service if subjected to impact loading. Even though no visible signs are present, internal damage may have occurred thus reducing its strength and margin of safety.
- This product is intended for work positioning only.
- Buck LeverGrab™ LAD must not be used on steel cable or wire rope.
- Holding the Release Lever of the Buck LeverGrab™ LAD in the open position, will result in the rope to continue to feed through the unit. Therefore, in the event of a cutout, the Buck LeverGrab™ LAD Release Lever must be released for rope to stop feeding through LAD.
- Never wrap an Adjustable Positioning Lanyard around a sharp member as the material could be cut or damaged.
- The optional wear guard is intended for use on poles, trees, and other structures to minimize wear (i.e. abrasion, cuts, etc.) to the rope. Ensure the wear guard is adjusted properly to cover all contact points of pole, tree, or structure.
- With each use, visually check that the Adjustable Positioning Lanyard snap hook / carabiner freely engages each body belt positioning D-ring and that the keeper / gate is completely closed and facing outward. Never rely solely on the feel or sound of a snap hook / carabiner engaging.
- Ensure each snap hook / carabiner is positioned so that its keeper / gate is never load bearing.
- When in the work position, ensure there is no pressure on the snap hook locking mechanism sufficient to depress it, as this will due to its length, render it incompatible with currently designed D-rings and make it very susceptible to rollout.
- Lubricate lock mechanism and keeper / gate on both sides of snap hook / carabiner at least weekly or as often as required to maintain smooth operation (no binding) with light weight lubricant such as BuckLube, WD-40®, Etc.
- Do not use lanyard for material handling purposes.
- Product covered under these instructions / warnings should not be resold / redistributed or re-used after use by original user.



Hardware may vary from that depicted in the illustration

It is imperative that you perform a trial test while standing on the ground to ensure the LAD properly grips the rope / locks prior to climbing.

Adjustable Positioning Lanyard Attachment: (options & hardware may vary from product shown below)

Proper Attachment



Fig. 5

Examples of Improper Attachment 



Fig. 6



Fig. 7

Proper Attachment: connecting hardware of APL must be attached to work positioning D-rings of your body belt as shown in Fig. 5. Gates of the carabiner and locking snaphook must be facing out.


Examples of Improper Attachment: Do not connect Adjustable Positioning Lanyard back onto itself and use as a cinch or choking device (Fig. 6). Do not connect lanyard to a single work positioning D-ring (Fig. 7).

To Operate:


1. Ensure Adjustable Positioning Lanyard is properly attached by holding onto the pole and leaning back slowly into the unit. Unit should support user.
2. To shorten the Adjustable Positioning Lanyard, lean slightly towards the pole, tree, or other structure while pulling the free end of the rope through the Buck LeverGrab™ LAD. (Fig. 8).
3. To lengthen the Adjustable Positioning Lanyard, slowly rotate the release lever towards your body until the rope feeds through the LAD, lengthening the lanyard, release lever to stop at your desired position (Fig. 9). Use caution when lengthening device as the LAD will not stop until the lever is released or you reach the sewn termination at the end of the lanyard.
Alternate method to lengthen Adjustable Positioning Lanyard: lean slightly towards the pole, tree, or other structure, grasp housing of LAD and rotate entire device towards your body as you rotate your hip backwards lengthening the lanyard (Fig. 10).
4. While using the Adjustable Positioning Lanyard, adjust length to minimize fall distance to under two feet (2').



LeverGrab Carabiner Positioning

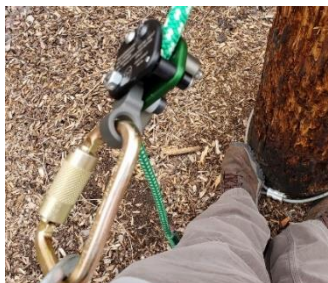


LeverGrab positioned on left side with Carabiner oriented as it leaves the factory (Right hand adjustment set-up)

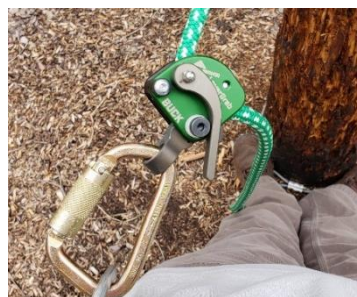

LeverGrab positioned on left side with Carabiner reversed (Left hand adjustment set-up)


A. To Remove the Carabiner from right hand adjustment set-up

1. With the handle of the LeverGrab (Green face plate) facing up (Fig. 11)
2. Rotate the carabiner clockwise (Fig. 11 – 12).
3. Open barrel of carabiner and rotate the carabiner clockwise out of the eye of the LeverGrab eye (Fig. 13 – 14).

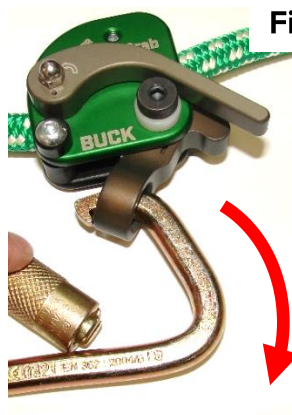

B. To Install the Carabiner for left hand adjustment set-up

1. With the handle of the LeverGrab (Green face plate) facing up (Fig. 15).
2. Open the barrel of the carabiner and rotate the carabiner clockwise into the eye of the LeverGrab eye (Fig. 15 – 16).
3. Continue to rotate carabiner clockwise until the carabiner is properly positioned (Fig. 17 – 18).

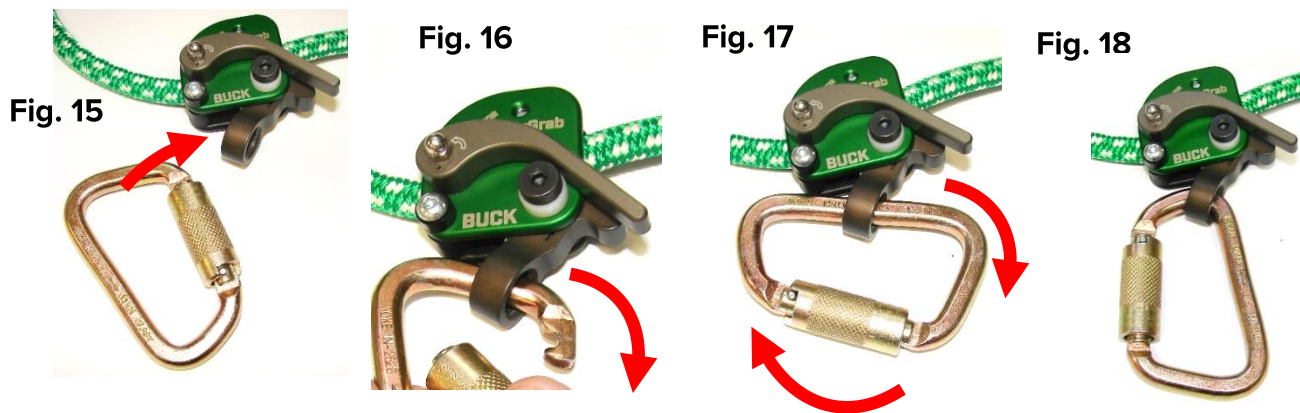

Cleaning / Storage Instructions:

A dirty product should be washed and rinsed in clean water, then dried. Do not store near solvents, corrosive chemicals or at extreme temperatures. Inspect your equipment carefully before use. This product should be stored in a clean and dry environment out of direct sunlight and away from extreme climate conditions. Ropes should be stored on racks or hooks to provide ventilation and should never be stored on concrete or dirt surfaces.

Warning / Product Identification Labels (Labels shown are Not To Scale)

(Standard Product Label)



(Not for Fall Arrest Label)



Inspections:

Date of Purchase	Date of 1 st Use	User
Date Inspected		Condition

STATEMENT of OBSOLESCENCE:

Precise “useful life expectancy” or “shelf life” for this product is not specified, as the degree of use, conditions of use, and the degree of care and storage determines useful life. All users maintain responsibility to select proper equipment for the job, be properly trained in its use, and ensure all personnel support equipment passes inspection before each use. Upon evidence of defects, damage or deterioration, all equipment shall be removed from service immediately and tagged or marked as unusable or destroyed. Additionally, all equipment shall be inspected on a regular basis not to exceed one year by a Competent Person, as defined by OSHA/ANSI, to verify that the equipment is safe for use. In the event of any question or concern regarding the condition of such equipment, users shall remove the equipment from service for further inspection. All users must comply with OSHA/ANSI/ASTM standards prior to and in using such equipment. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

INTERNATIONAL USERS:

Notwithstanding the above, please know that certain international jurisdictions require manufacturers of equipment to provide customers with a maximum useful lifespan (sometimes referred to as a “Statement of Obsolescence”). To the extent required, Buckingham personal protective equipment manufactured from synthetic fiber materials including but not limited to items such as webbing and/or rope are subject to a maximum useful lifespan of ten (10) years from the date of manufacture. As stated above proper usage, storage, maintenance, and care impacts the useful lifespan of equipment. Extreme circumstances may require that product must be retired after only one use. This statement is made in conformance and compliance with BS EN 365:2004. International users must ensure that product inspections are completed by Competent Persons as defined by international standards including but not limited to British Standard (“BS”). If equipment fails any inspections, it must be immediately withdrawn from service and destroyed. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

OUR GUARANTEE:

We guarantee the equipment we manufacture to be free from defects in material and workmanship. We will repair any equipment deemed to be defective which is returned to us by the original purchaser. However, this guarantee is void if any product is changed or altered in any way, or if the product is used in a manner other than for which it is intended. This express guarantee supersedes all other expressed or implied guarantees, obligations or liabilities. There are no implied warranties of merchantability or fitness for a particular purpose and as such, all implied warranties are specifically disclaimed.

LIMITATION ON LIABILITY:

In no event will Buckingham or buyer be liable to the other for lost revenues, lost profits or any other indirect, consequential, special or punitive losses or damages, however caused, whether in action for breach of contract, strict liability, tort, or otherwise, even if advised of the possibility of such losses or damages. In no event will Buckingham’s liability exceed the total amount paid by the buyer to Buckingham for the product or equipment giving rise to such claim(s).

Please see other terms and conditions relating to this product at <https://buckinghammfg.com/terms-conditions/>

REGISTRATION:

Before use of the product, ensure to register and confirm the product at www.buckinghammfg.com/register.

Patented, for more information, visit BuckinghamMFG.com/Patents.

BUCKINGHAM MFG.

1-11 Travis Ave, Binghamton, NY 13904

1-800-937-2825

www.buckinghammfg.com