

BUCKINGHAM MFG.

P/N N14 SERIES

Replaceable Lanyard Parking Attachment Element

Warning: Do not use this product if you cannot understand and follow the instructions and warnings that come with it and complete all necessary functions.

The Replaceable Lanyard Parking Attachment Element is intended for use in stowing the connecting hardware of your lanyard when not in use. The loop will release, (at a force of less than 120 lb.) the parked end of the lanyard in the event that the lanyard is snagged on an object.

Kit Includes: (Fig. 1)

- One Breakaway Loop Element
- One Removable Friction Buckle

NOTE: Color may vary from that shown.


Breakaway Loop Element Removable Friction Buckle



Fig. 1

Installation Instructions:

1. Determine which side of the harness you want to install the Replaceable Lanyard Parking Attachment Element. Typically, it is installed between the chest strap / sternal Attachment and the shoulder / shoulder pad area of the vertical strap (Fig. 2).
2. Fold the vertical strap of the harness onto itself to create a web loop (Fig. 3) and insert it through the slot of the breakaway loop element. Ensure the off-set section of the breakaway loop element is facing away from the webbing and towards the bottom section of harness (Fig. 4 - 5).
3. Open the web loop and insert the removable friction buckle through the opening with the ridge lines on the center bar facing up (Fig. 6).
4. Insert the webbing under the four tabs of the removable friction buckle (Fig. 7).
5. Pull webbing tight seating the removable friction buckle onto the breakaway loop element (Fig. 8).
6. Position the Replaceable Lanyard Parking Attachment Element at the desired location (Fig. 9).

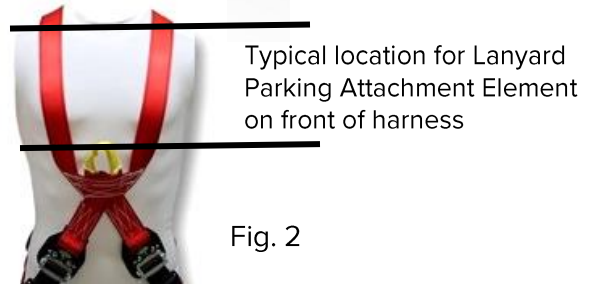

Typical location for Lanyard Parking Attachment Element on front of harness

Fig. 2

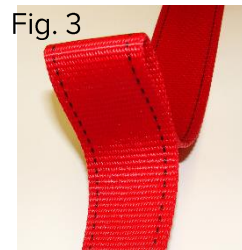


Fig. 3



Fig. 4



Fig. 5



Fig. 6

Ridge lines facing up



Fig. 7



Fig. 8



Fig. 9

Note: The Replaceable Lanyard Parking Attachment Element is designed to breakaway at less than 120 lb. as required by ANSI Z359.11. Once broken it will need to be replaced. Follow the Removal Instructions.

Removal Instructions:

1. Feed the webbing through the removable friction buckle to create slack and form a loop (Fig. 10).
2. Remove the removable friction buckle from the webbing (Fig. 11).
3. Remove the broken breakaway loop element by pulling the webbing out of the slot (Fig. 12).
4. To install a new Replaceable Lanyard Parking Attachment Element follow the installation Instructions above.

Fig. 10



Fig. 11



Fig. 12



Warnings:

The Replaceable Lanyard Parking Attachment Element must:

1. Only be used for attachment of lanyard connectors when the lanyard is not in use.
2. Never be used as a fall arrest, fall restraint or work positioning attachment.
3. Not be installed where it can interfere with the operation of the other hardware or connection points of the harness.
4. Not be attached to oversized or multiple connectors as they may cause it to slide from its original position.

NOTE: This product cannot be returned unless it is in new / unused condition.

STATEMENT of OBSOLESCENCE:

Precise “useful life expectancy” or “shelf life” for this product is not specified, as the degree of use, conditions of use, and the degree of care and storage determines useful life. All users maintain responsibility to select proper equipment for the job, be properly trained in its use, and ensure all personnel support equipment passes inspection before each use. Upon evidence of defects, damage or deterioration, all equipment shall be removed from service immediately and tagged or marked as unusable or destroyed. Additionally, all equipment shall be inspected on a regular basis not to exceed one year by a Competent Person, as defined by OSHA/ANSI, to verify that the equipment is safe for use. In the event of any question or concern regarding the condition of such equipment, users shall remove the equipment from service for further inspection. All users must comply with OSHA/ANSI/ASTM standards prior to and in using such equipment. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

INTERNATIONAL USERS:

Notwithstanding the above, please know that certain international jurisdictions require manufacturers of equipment to provide customers with a maximum useful lifespan (sometimes referred to as a “Statement of Obsolescence”). To the extent required, Buckingham personal protective equipment manufactured from synthetic fiber materials including but not limited to items such as webbing and/or rope are subject to a maximum useful lifespan of ten (10) years from the date of manufacture. As stated above proper usage, storage, maintenance, and care impacts the useful lifespan of equipment. Extreme circumstances may require that product must be retired after only one use. This statement is made in conformance and compliance with BS EN 365:2004. International users must ensure that product inspections are completed by Competent Persons as defined by international standards including but not limited to British Standard (“BS”). If equipment fails any inspections, it must be immediately withdrawn from service and destroyed. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

OUR GUARANTEE:

We guarantee the equipment we manufacture to be free from defects in material and workmanship. We will repair any equipment deemed to be defective which is returned to us by the original purchaser. However, this guarantee is void if any product is changed or altered in any way, or if the product is used in a manner other than for which it is intended. This express guarantee supersedes all other expressed or implied guarantees, obligations or liabilities. THERE ARE NO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND AS SUCH, ALL IMPLIED WARRANTIES ARE SPECIFICALLY DISCLAIMED.

LIMITATION ON LIABILITY:

IN NO EVENT WILL BUCKINGHAM OR BUYER BE LIABLE TO THE OTHER FOR LOST REVENUES, LOST PROFITS OR ANY OTHER INDIRECT, CONSEQUENTIAL, SPECIAL OR PUNITIVE LOSSES OR DAMAGES, HOWEVER CAUSED, WHETHER IN ACTION FOR BREACH OF CONTRACT, STRICT LIABILITY, TORT, OR OTHERWISE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH LOSSES OR DAMAGES. IN NO EVENT WILL BUCKINGHAM'S LIABILITY EXCEED THE TOTAL AMOUNT PAID BY BUYER TO BUCKINGHAM FOR THE PRODUCT OR EQUIPMENT GIVING RISE TO SUCH CLAIM(S).

PLEASE SEE OTHER TERMS AND CONDITIONS RELATING TO THIS PRODUCT AT <https://buckinghammfg.com/terms-conditions/>

REGISTRATION:

Before use of the product, ensure to register and confirm the product at www.buckinghammfg.com/register.

Buckingham Mfg.
Binghamton, NY
www.buckinghammfg.com
1-800-937-2825

Information contained in these written instructions supersedes all other information (written, audio, video etc.) produced by Buckingham Mfg. prior to the revision date of this document.