

BUCKINGHAM MFG.

Instructions / Warnings “H” Style Retro Fit Harnesses

Warning: Do not use this product if you cannot understand and follow the instructions and warning that come with it and complete all necessary functions.

Buckingham’s “H” Style Retro Fit Harnesses shown below are designed to be attached to Buckingham’s Arbormaster Deluxe Series Saddles (PN 11290, PN 11291, PN 11292, & PN 11293) & Glide II Series Saddles to create a Full Body Harness as shown in Fig. 1.

NOTES:

- All Buckingham Retro Fit Harnesses must be properly coupled to only a compatible ASTM F887 rated Arborist Saddle (as noted above) and with ANSI Z359.12 compatible connectors.
- Arborist Saddle and Carabiner are sold separately (One carabiner required).
- Hardware / material colors may vary from that shown. Harnesses Chest Strap Styles may also vary (see Fig. 1a & 1b).

The “H” Style Retro harnesses are supplied with two attachment loops for attachment to the saddle waist strap in the front and one loop for carabiner attachment at the rear as shown below.

Fig. 1



Strap attachment loops

Front View



Rear View



Fig. 1a



Fig. 1b

Fig. 1a. - Hook & Loop Fastener Chest Strap
Fig. 1b. - Chest Strap with Quick Connect Buckle

Harness Attachment to Arborist Saddle:

- Lay the saddle on a flat surface with the back side facing up. Ensure the saddle is not tangled and has no twisted straps (Fig. 2).
- Insert a compatible carabiner through the Retro Harness Attachment Loop located on the back pad of the saddle (Fig. 3).
- Rotate the carabiner so it’s small end is nested in the loop (Fig. 4).
- Align the Retro Harness with the Dorsal D-ring facing out and with the Dorsal strap attachment loop towards the saddle back pad. Ensure there are no twists or tangles in the harness (Rear View).
- Open the carabiner attached to the saddle back pad Retro Harness Attachment Loop and insert it through the Dorsal strap attachment loop of the harness (Fig. 5a). Close the carabiner and visually check that the gate is fully closed (Fig. 5b).



Fig. 2



Fig. 3



Fig. 4

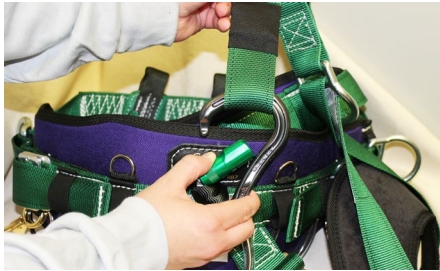


Fig. 5a



Fig. 5b

- With the harness hanging down behind you, don the saddle and adjust it to fit properly (Fig. 6).
 - Ensure there are no twists or tangles in the harness. Carefully pull it over your head so that the shoulder pads lie flat on your shoulders and the shoulder straps are aligned horizontally with the waist strap of the saddle.
 - Attach the shoulder straps to the saddle waist strap by feeding the billet end of the waist strap through the loop of the corresponding harness shoulder strap (Fig. 7a). Then feed buckle end of the waist strap through the loop on the other corresponding shoulder strap (Fig. 7b).
 - Properly connect the waist strap and visually check it for attachment prior to use (Fig. 7c).
- NOTE: Arbormaster saddles are supplied with different types of waist strap buckles (tongue buckle, Interlocking, quick connect, etc.) therefore follow Arbormaster Saddle instructions supplied with your saddle for proper connection.



Fig. 6

“H” Style Retro Harness



Fig. 7a

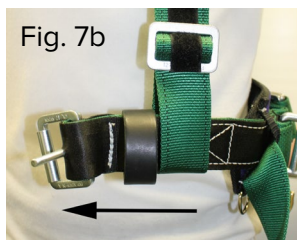


Fig. 7b



Fig. 7c

Harness Adjustment:

The Dorsal D-ring must be positioned in the upper, middle portion of your back and fall 2 in. above or below the underside of your armpit (Fig. 8).

- To adjust the Dorsal D-ring lower, reach around your back and pull down on strap exiting the Dorsal adjustment buckle.
- To raise the D-ring higher, put more slack in the Dorsal strap loop by feeding the web back through Dorsal strap buckle.
- When adjustment is complete secure the excess webbing of the Dorsal strap in the elastic strap keeper.
- Note: Dorsal D-ring adjustment may require harness removal or the assistance of a co-worker.

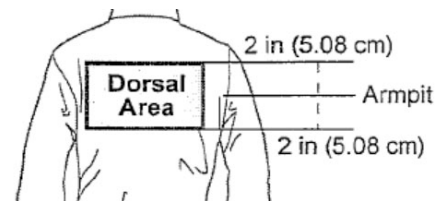


Fig. 8


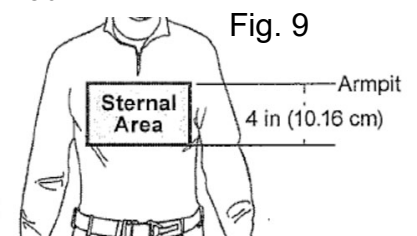


Fig. 9

The Sternal D-ring location must fall from the underside of your armpit to 4 in. below (Fig. 9).

- To adjust the Sternal D-ring location, put slack into the shoulder strap webbing going through the adjustment buckle and pull web through the buckle as needed (Fig. 10).


Loop length will change with adjustment

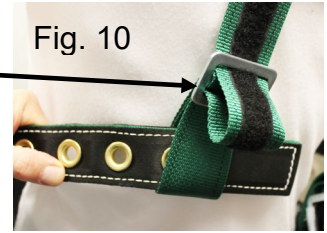


- To raise the D-ring higher, pull the webbing up through the buckle creating a larger loop in the Sternal strap (Fig. 10).
- To lower the D-ring, pull the webbing down through the buckle creating a smaller loop in the Sternal strap (Fig. 10).
- Repeat the adjustment on the opposite strap so that the straps are even.

Installation Instructions For Hook and loop Fastener Chest Strap:

STEP 1: Slide the free end of the chest strap beneath the right shoulder strap. (Fig 11).

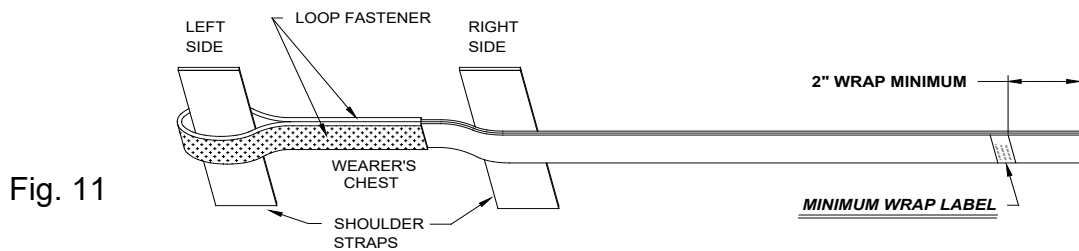


STEP 2: Wrap the chest strap around the right shoulder strap and continue across the front of the left shoulder strap. Ensure that the hook and loop fasteners are securely attached (Fig. 12).

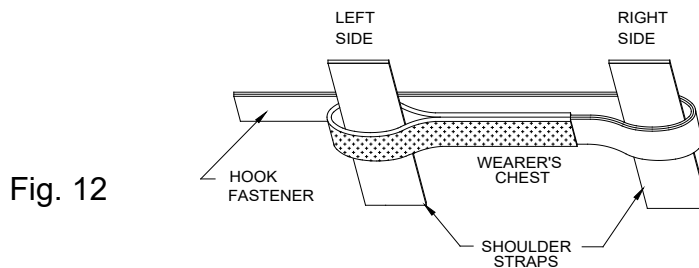

STEP 3: Continue to wrap until the minimum wrap label is at least 2" behind the left shoulder strap (Fig. 13).

CAUTION strap **MUST** be wrapped a minimum of 2 inches around the back of the shoulder strap.

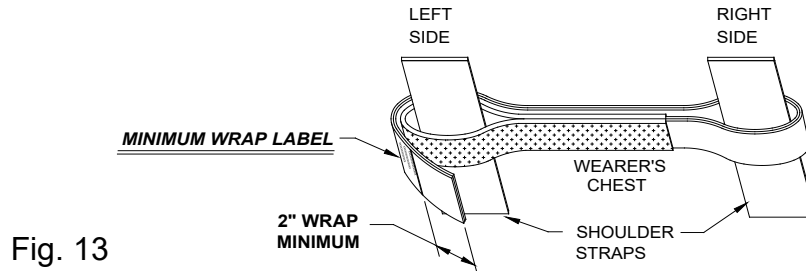

HOOK AND LOOP FASTENER CHEST STRAP CLOSURE INFORMATION

- Pressing the fastener together will increase the fastener’s resistance to unintentional separation (opening). Vibration over time will produce the same effect.
- Most oils do not significantly affect closure performance
- Cold improves the rated closure strength, however, it may reduce cycle life.
- Melting temperature: 400° F

Additional Instructions / Warnings for Quick Connect Buckle

For your information and attention:

Quick Connect Buckles on those Full Body Harnesses (FBH) and Arborist's Tree Saddles that include this style of buckle may unintentionally disengage under the condition outlined below: If the pawls of the buckle do not freely rotate, proper engagement of the tab end to the receptor end of the buckle will be hindered / restricted. If as a result of the user's movements or through contact with an obstruction during the course of his/her work, one of the two pawls of the receptor end of the buckle is depressed while tension is induced on the strapping attached to the buckle, the potential exists that disengagement of the tab end of that side from the pawl may occur. If that position is maintained and again through the user's movements or contact with an obstruction the opposite side pawl is depressed, the tab end of the buckle may totally disengage from the receptor end.

To eliminate the potential for this condition, you the user should:

1. Inspect your equipment before each use as you would for all safety equipment. Equipment should be replaced if you have any question / doubt about it being safe for use.
2. Always position the buckles of your equipment so that contact with obstructions is avoided.
3. Test the pawls on your Quick Connect Buckles to ensure they freely rotate and return back to their original position. If any pawl does not freely rotate, the buckle should be (a) cleaned as outlined below to ensure there are no obstructions inside the buckle hindering its intended function and (b) lubricated with a lightweight lubricant such as WD-40®, as recommended for locking snaphooks. If the pawl still does not freely rotate, you should contact Buckingham Mfg. at the telephone number outlined below and request a Returned Goods Authorization Number for immediate return of your harness or Arborists tree saddle for our inspection and/or buckle replacement.
4. Ensure the receptor end and tab end of the Quick Connect Buckle is fully connected with both locking pawls engaged. When the two halves are properly attached together, a clicking sound should be heard. Complete by pulling the adjuster strap through the buckle and tighten until it is snug but comfortable, thus ensuring complete engagement.


Buckingham's primary concern is to provide a quality product to its customers to enable them to carry out their profession in a safe manner. However, we always require our customer's assistance in proper equipment operation, inspection and maintenance.

H Style Retro Harness Instructions / Warnings:

Manufacturer's instructions shall be provided to the user of this product. If additional copy is needed, contact Buckingham Mfg. Co. Read carefully, understand and heed these and all instructions, warnings and cautions before using this equipment. Failure to do so could result in your serious injury or death. Employer – instruct employee as to the proper use, warnings and cautions before use of this equipment.

Buckingham retro harnesses used with arborist saddles are intended as personal protection equipment for use by properly trained professionals only. Each piece of equipment is important in its function and design and in its relationship to all other components. Energy absorbing lanyards should be considered as a part of a personal fall arrest system used in conjunction with a harness. The energy absorber (pack end) must always be attached to the fall arrest attachment device included on the users equipment. Cover of energy absorber should not be removed and will not have any effect on the shock absorbing feature. Harnesses must be worn so the fall arrest attachment is centered in back near shoulder blade level. It is recommended that:

- A connecting device and fall arrest attachment manufactured with a web loop be attached with a hitch (See detail), or carabiner.
- If using a locking snap hook to a web loop fall arrest attachment the web loop must be protected by an integral wear piece to enhance visual inspection.

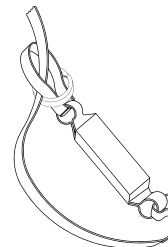

- All Web loop fall arrest attachments must be inspected before each use. The inspection should include, but not be limited to, inspecting for: webbing cuts, kinks, abrasions, burns, excessive swelling, excessive wear, discoloration, charring, broken fibers, loose stitching and chemical or physical exposures.
Note: The use of a locking snaphook to a web loop fall arrest attachment without an integral wear piece is acceptable in emergency situations (i.e. rescue, evacuation, etc.) Attachment of a locking snap hook to a web loop fall arrest attachment with no wear piece can cause premature wear of the webbing and stitching. This degradation can cause the web loop layers to separate and be incapable of supporting your weight. Therefore the web loop fall arrest attachment must be inspected before use. Additionally, connections used to attach to the fall arrest attachment must have a minimum gate rating of 3600 lbf. and meet ANSI Z359.12 requirements.

OSHA requires that impact force in a fall not exceed an 1800 lbf. limit with a harness. Proper use of a harness with an energy absorbing lanyard will allow compliance with these limits when properly assembled.


Selection of products should be such that they aid the worker in the performance of his job and particular work situation. Be certain this equipment is suitable for the intended use and work environment. It should only be used as personal protection equipment. If suitability for intended use is questionable, always consult your Supervisor, Safety Director or contact Buckingham Mfg. at (607) 773-2400 or 1-800-937-2825.

No fall protection system can guarantee that you will not sustain injuries should a fall occur. Therefore, lanyards should be kept as short as possible to minimize free fall distance. OSHA specifies that maximum length of lanyard shall provide for a fall of no greater than six (6) feet. In addition, other factors such as harness stretch not to exceed 18", D-ring / connector length, settling of the user's body, lanyard length, including energy absorber extension and all other contributing elements should be such that the user can not fall a distance that will allow contact with any lower level. The lanyard attachment point on the user should be in the middle of the back near shoulder blade level. Do not lengthen a lanyard by tying or knotting to another lanyard or connecting a snap to a snap. Lanyards should not be shortened by knotting rope or webbing as this can reduce the strength by 50% or more. NOTE: The hitch detailed above is not considered a knot.

Do not alter your harness or any safety product in any way. If your harness does not fit properly, replace it with one of the correct size. Wear your harness snug but not tight.

Unless the snap hook is a locking type with minimum gate rating of 3600 lbf., meets ANSI Z359.12 requirements, and designed for the following connections, snap hooks shall not be engaged:

- directly to webbing, rope or wire rope
- to each other - they are not intended to be used that way and could twist apart
- to a D-ring to which another snap hook or other connector is attached.
- to a horizontal lifeline
- to any object which is incompatibly shaped or dimensioned in relation to the snap hook such that the connected object could depress the snap hook keeper a sufficient amount to cause it to release. (See Illustration)

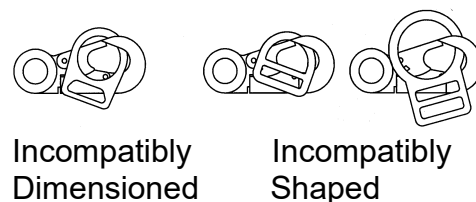

Thorough employee training in the selection and proper use of personal protection equipment is imperative.

CAUTION

- This product is designed to be used by a person with a maximum weight of 350 lbs. when fully equipped.
- Fall protection equipment, (i.e. fall arrest, work positioning belts, retrieval, suspension etc.) should not be resold or provided to others for re-use after use by original user as assurance cannot be granted that a used product meets criteria of applicable standards and is safe for use to a subsequent user.
- Only Buckingham Mfg. Co. or those people authorized in writing by Buckingham Mfg. Co. may make repairs to this equipment.
- Equipment subjected to impact loading must be immediately removed from service, destroyed and discarded.
- In the event of a fall, the employer must have a rescue plan and the means to implement it.

- Attach only locking connecting devices meeting standards / regulations for intended use for fall arrest, positioning and suspension to rear fall arrest D-ring on harness and fall arrest anchor point, saddle / belt D-rings and attachment points.
- Only positioning connecting devices should be attached to side D-rings, as side D-rings are not intended for fall arrest.
- Do not connect any tools, accessory loops / snaps, etc. to the positioning D-rings. D-rings are for attachment of connecting device locking snap hooks only.
- For units with Work Position Web Loop(s): Buckingham recommends attachment only to carabiner. Buckingham Mfg. **does not** recommend attachment of a metal connector, other than a carabiner, to a web loop fall arrest attachment unless the web loop is protected by an integral wear piece, the connector meets the requirements of ANSI Z359.12 (3600 lbf. rated gate), the snap hook lock mechanism cannot inadvertently be depressed, and the web loop fall arrest attachment point is inspected prior to each use. Attachment of a metal connector, such as a locking snap hook, to a web loop fall arrest attachment with no wear piece can cause premature wear of the webbing and stitching. This degradation can cause the web loop layers to separate and be incapable of supporting your weight.
- If connecting to a personal fall arrest system by attaching directly through the web loop of an energy absorber carefully inspect the inside of the web loop for cuts, abrasions, broken strands, or excessive wear.
- Fall arrest anchor points must support a minimum of 5000 lbf. per attached worker and be independent of worker support
- For fall arrest, always keep anchor point above rear fall arrest attachment. If climbing above anchor point, attach to a new anchor point higher up. When anchor point to allow for connection above the fall arrest attachment device is not available, lanyard positioning must be such that free fall will be limited to a maximum of 6 feet and there will be no contact with a lower level.
- Never use an energy absorbing lanyard for positioning. Unit can open and extend which could result in a fall.
- Always attach the energy absorbing lanyard to the rear fall arrest attachment device included on the users equipment.
- Always visually check that: 1) each snap hook / carabiner freely engages D-ring or anchor point, 2) keeper / gate is completely closed with each use. **Never** rely solely on the feel or sound of a snap hook / carabiner engaging.
- Make sure each snap hook / carabiner is positioned so that its keeper / gate is **never** load bearing.
- Never use combinations of components or sub systems, or both, which may affect or interfere with the safe function of each other.
- Ensure there is no pressure on the snap hook locking mechanism sufficient to depress it as this will, due to its length, render it incompatible with currently designed rings and make it very susceptible to rollout.
- Never disable locking keeper / gate on snap hook / carabiner, punch holes in or alter a connecting device in any way.
- Avoid contact of this equipment with sharp edges, abrasive surfaces, high temperature surfaces, welding, or other heat sources, electrical hazards or moving machinery. When not in use, store to prevent exposure to the elements as well as over exposure to sunlight (U.V. degradation).
- Avoid contact of this equipment with chemicals that may damage the material. If in doubt, contact Buckingham Mfg. Co.
- This equipment is for personal use only, not towing or hoisting.
- **Never** work without independent fall arrest protection if there is danger of a fall.
- Always visually check that all buckles and snap hooks or carabiners are properly closed before use.
- Product covered under these instructions / warnings should not be resold / redistributed or re-used after use by original user.

INSPECTION

Inspection should occur prior to each use of the harness by the user and at a minimum of once a year by a competent person. Carefully inspect the harness for indications of wear, deterioration or impact loading. The inspection should include, but not be limited to, inspecting for:

- product with all leather strength components. If found, immediately cease use, discard and replace as product does not meet existing standards.
- webbing cuts, kinks, abrasions, burns, excessive swelling, excessive wear, discoloration, cracks, charring, broken fibers, loose stitching, chemical or physical exposures and buckle holes in strap are not damaged.
- loose, bent or pulled rivets, bent grommets, and broken, cut or burned threads.
- nicks, cracks, distortion, excessive wear or corrosion of hardware (buckle, "D"-ring, etc.).

NOTES:

If any evidence of wear, deterioration or impact loading as outlined is observed, immediately cease use, destroy the product and replace it with new equipment. Should any unusual conditions not outlined above be observed, or you have reasonable doubt about a particular condition, remove the equipment from service and notify your Supervisor, Safety Director or contact Buckingham Mfg. for clarification. Failure to carefully and completely inspect your equipment could result in serious injury or death.

IMPACT LOADING INDICATOR NOTES: Buckingham harnesses are equipped with an impact load indicator label that is designed to deploy upon arresting a fall. An impact load will tear the thread exposing this label making the text legible. If you can read the text, the harness has been impact loaded. If any evidence of wear, deterioration or impact loading as outlined is observed, immediately cease use, destroy the product and replace it with new equipment. Should any unusual conditions not outlined above be observed, or you have reasonable doubt about a particular condition, remove the equipment from service and notify your Supervisor, Safety Director or contact Buckingham Mfg. for clarification. Failure to carefully and completely inspect equipment could result in serious injury or death.



Impact Load Indicators shown before and after impact loading. Should impact loading be observed, immediately cease use, destroy the product, and replace it with new equipment.

Maintenance

- Proper maintenance and storage of your equipment will prolong its useful life and contribute toward its performance.
- Nylon and polyester webbing should be cleaned with water and mild soap (a dish washing soap that removes grease (i.e. Dawn)) and be allowed to dry thoroughly without using excessive heat.

Rust on Harness Hardware

If through regular product inspection you note rust on hardware, the severity of the rust will determine whether the harness is deemed usable or unacceptable and recommended for removal from service. Below are examples of hardware rust exposure deemed acceptable for keeping the harness in service or unacceptable and recommended to cease use.

Slight/Moderate (Acceptable): White Scale / Oxidation and Surface Rust

Single Slot



Slight

2 Slot



Slight

QC buckle



Moderate

Buckingham recommends cleaning hardware in this condition using an ultrafine Scotch Brite scouring pad (3M part number 14049 available at distributors such as Grainger), cut to approximately a 1" x 1" square, and with WD-40 Multi-Use Product, scrub the areas that exhibit rust in a back and forth motion until all surface rust has been removed.


Severe (Unacceptable): Pitting / Excessive Red Rust

Single Slot



Severe

2 Slot

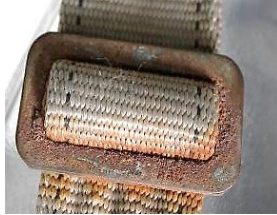

Severe

QC buckle



Severe

Note: Hardware in this condition is recommended for removal from service.

Dee rings are not shown above but shall follow the same Rust on Harness Hardware criteria as shown above

Please contact your Buckingham Customer Service Representative at 800-937-2825 should you have any questions as to condition of the hardware or your product.

Storage: Storage areas should be clean, dry and free of exposure to corrosive elements, fumes, etc. To aid in protecting the hardware from rusting, it is recommended that the hardware be treated with BuckLube, WD-40® Multi-Use Product, Etc. at regular intervals.

STATEMENT of OBSOLESCENCE:

Precise “useful life expectancy” or “shelf life” for this product is not specified, as the degree of use, conditions of use, and the degree of care and storage determines useful life. All users maintain responsibility to select proper equipment for the job, be properly trained in its use, and ensure all personnel support equipment passes inspection before each use. Upon evidence of defects, damage or deterioration, all equipment shall be removed from service immediately and tagged or marked as unusable or destroyed. Additionally, all equipment shall be inspected on a regular basis not to exceed one year by a Competent Person, as defined by OSHA/ANSI, to verify that the equipment is safe for use. In the event of any question or concern regarding the condition of such equipment, users shall remove the equipment from service for further inspection. All users must comply with OSHA/ANSI/ASTM standards prior to and in using such equipment. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

INTERNATIONAL USERS:

Notwithstanding the above, please know that certain international jurisdictions require manufacturers of equipment to provide customers with a maximum useful lifespan (sometimes referred to as a “Statement of Obsolescence”). To the extent required, Buckingham personal protective equipment manufactured from synthetic fiber materials including but not limited to items such as webbing and/or rope are subject to a maximum useful lifespan of ten (10) years from the date of manufacture. As stated above proper usage, storage, maintenance, and care impacts the useful lifespan of equipment. Extreme circumstances may require that product must be retired after only one use. This statement is made in conformance and compliance with BS EN 365:2004. International users must ensure that product inspections are completed by Competent Persons as defined by international standards including but not limited to British Standard (“BS”). If equipment fails any inspections, it must be immediately withdrawn from service and destroyed. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

OUR GUARANTEE:

We guarantee the equipment we manufacture to be free from defects in material and workmanship. We will repair any equipment deemed to be defective which is returned to us by the original purchaser. However, this guarantee is void if any product is changed or altered in any way, or if the product is used in a manner other than for which it is intended. This express guarantee supersedes all other expressed or implied guarantees, obligations or liabilities. There are no implied warranties of merchantability or fitness for a particular purpose and as such, all implied warranties are specifically disclaimed.

LIMITATION ON LIABILITY:

In no event will Buckingham or buyer be liable to the other for lost revenues, lost profits or any other indirect, consequential, special or punitive losses or damages, however caused, whether in action for breach of contract, strict liability, tort, or otherwise, even if advised of the possibility of such losses or damages. In no event will Buckingham's liability exceed the total amount paid by the buyer to Buckingham for the product or equipment giving rise to such claim(s).

Please see other terms and conditions relating to this product at <https://buckinghammfg.com/terms-conditions/>

REGISTRATION:

Before use of the product, ensure to register and confirm the product at www.buckinghammfg.com/register.

NOTE: Ensure proper fit / size of product before use. This product **cannot** be returned unless it is in new / unused condition.

BUCKINGHAM MFG.
1-800-937-2825
www.buckinghammfg.com

Information contained in these written instructions supersedes all other information (written, audio, video etc.) produced by Buckingham Mfg. prior to the revision date of this document.