


I|S|C

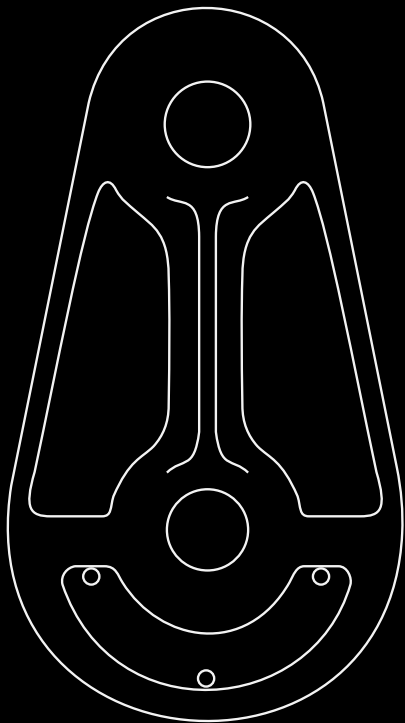


CE



Rigging Pulleys

climb. work. rescue.




Rigging Pulleys




RP048 RP050 RP051 RP054 RP055 RP056 RP057

EN	English	General Instructions for Use	10
CS	Český	Obecné pokyny k použití	11
DA	Dansk	Generelle brugerinstruktioner	12
DE	Deutsch	Allgemeine Bedienungsanleitung	13
ES	Español	Instrucciones generales de uso	14
FI	Suomi	Yleinen käyttöohje	16
FR	Français	Instructions générales d'utilisation	17
IT	Italiano	Istruzioni generali d'uso	18
NL	Nederlands	Algemene gebruiksinstructies	19
NO	Norsk	Generell bruksanvisning	20
PL	Polski	Ogólne instrukcje dotyczące użytkowania	21
PT	Português	Instruções gerais de utilização	23
SV	Svenska	Allmänna användarinstruktioner	24
ZH	简体中文	的使用一般说明	25
JP	日本語	使用のための一般的な手順	26


A Nomenclature

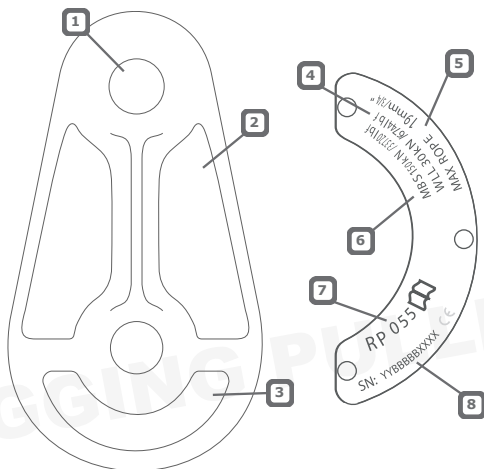

B Care & Maintenance





C Use

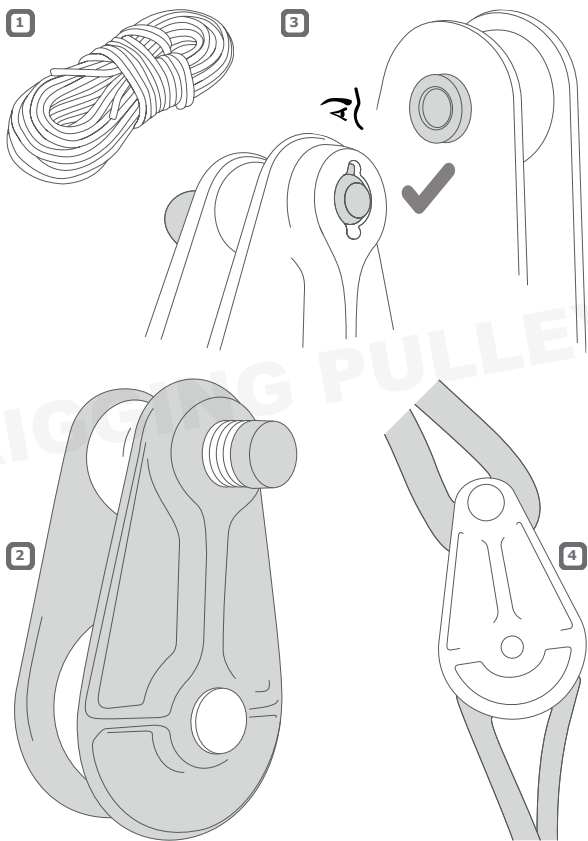

D


Misuse

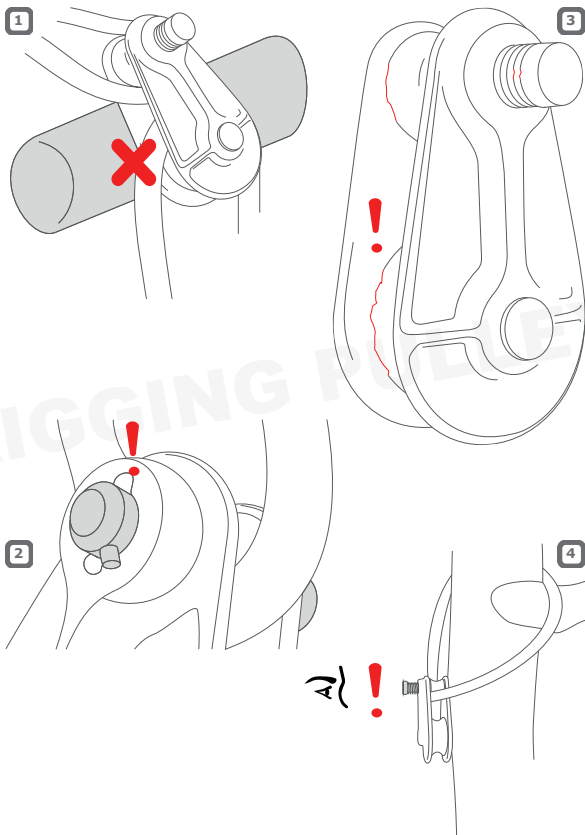

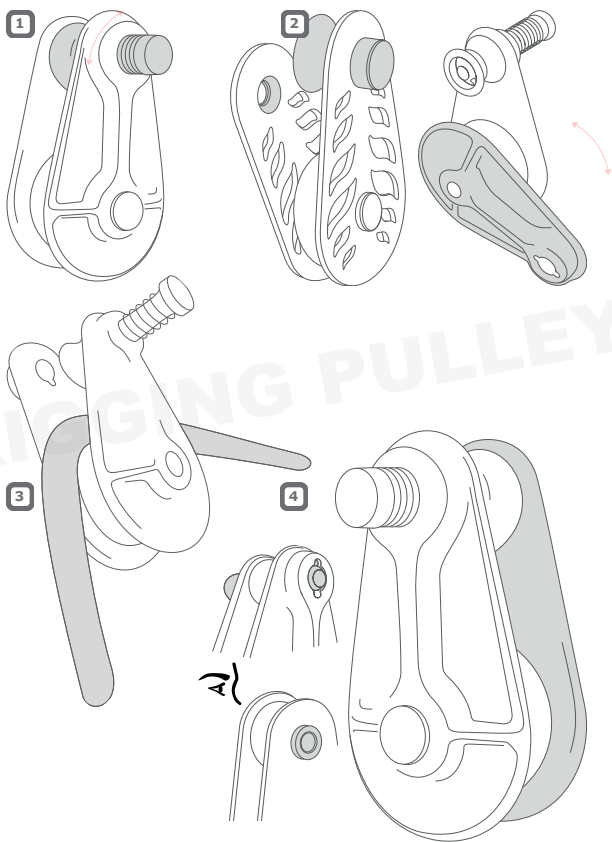

F


Pre-use Check

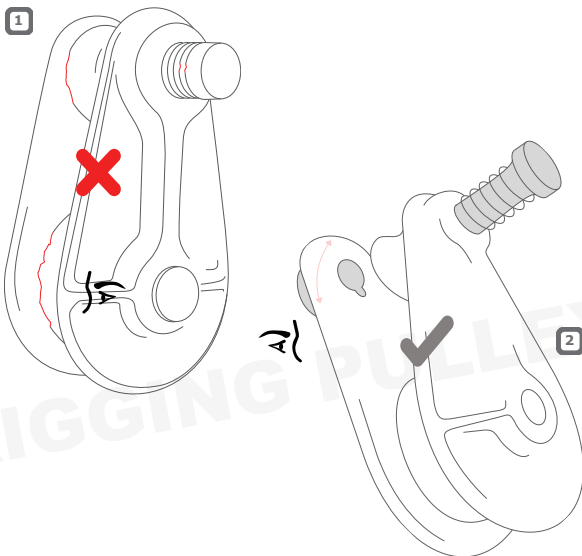

	Side Cheeks	Pulley Wheel	WLL	Working Line		Topping Strop*		Unit Weight
				Size	MBS	Size	MBS	
RP048			1700kg (3800lb)	13mm (1/2")	4500kgf (9900lbf)	16mm (5/8")	7400kgf (16650lbf)	0.5kg (1lb)
RP050			2000kg (4400lb)	13mm (1/2")	4500kgf (9900lbf)	19mm (3/4")	10630kgf (24000lbf)	1.6kg (3.5lb)
RP051			2000kg (4400lb)	16mm (5/8")	7720kgf (17000lbf)	25mm (1")	17180kgf (37800lbf)	1.6kg (3.5lb)
RP054			3000kg (6600lb)	16mm (5/8")	7720kgf (17000lbf)	25mm (1")	17180kgf (37800lbf)	2.5kg (5lb)
RP055			3000kg (6600lb)	19mm (3/4")	10630kgf (24000lbf)	29mm (1 1/8")	21270kgf (46800lbf)	2.3kg (5lb)
RP056			2000kg (4400lb)	16mm (5/8")	7720kgf (17000lbf)	25mm (1")	17180kgf (37800lbf)	1.6kg (3.5lb)
RP057			4000kg (8800lb)	19mm (3/4")	10630kgf (24000lbf)	29mm (1 1/8")	21270kgf (46800lbf)	3.8kg (8.5lb)


*Based on Yale Polydyne and Double Esterlon

1

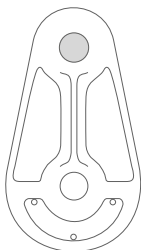

A


2

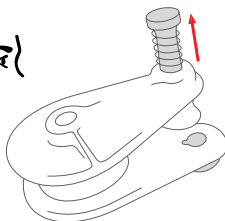




3




A

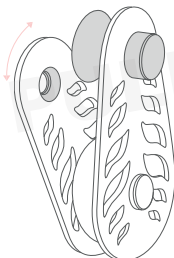

4



H Applications

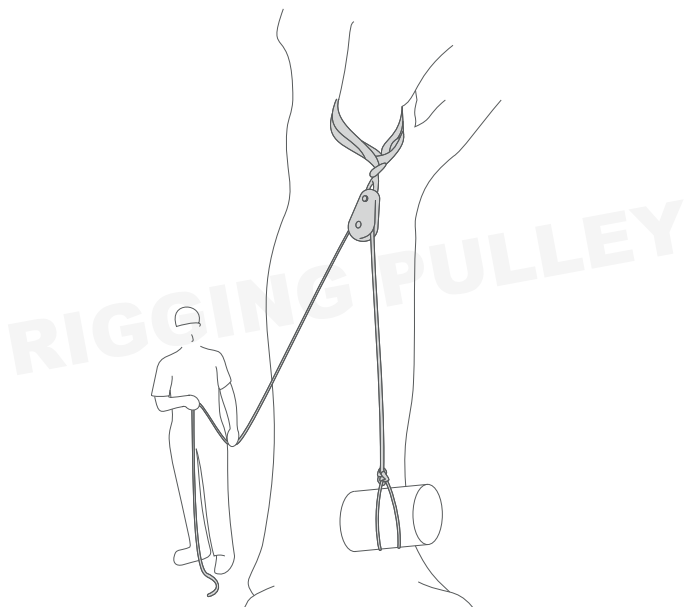

[A] Nomenclature

1. Locking Mechanism
2. Body Plate (Aluminium/Steel)
3. Product Information Plate
4. Working Load Limit
5. Rope Diameter Range
6. Minimum Breaking Strength
7. Model Variant
8. Serial Number & CE Mark

[B] Care and Maintenance**[C] Use**

Ideally, the device should be used when perpendicular to the stem.

1. Maximum Rope Diameter stated on product, ranging from 13mm – 19mm
2. Ensure both plates are closed and locked into place using the spring-loaded locking axle or the screw mechanism
3. Where necessary, ensure the spring-loaded locking axle pin is secure in its secure slot. Similarly, ensure the screw is fully locked for use.
4. Two lines are connected to the device – the Topping Strop (top) and the Working Line (bottom)

[D] Misuse

The product is meant for use as part of a rigging system, primarily for the arborist industry. It is NOT designed to be used for Live Loads

1. Do not use the device while it rests over protrusions from the tree, or at an angle
2. Ensure the spring-loaded locking axle pin is secure in its slot
3. Do not overload the working line as damage can be caused leading to an unsafe device
4. Ensure that the spring-loaded axle or screw mechanism faces away from the tree when in use

[E] Plate Operation

1. Free the plate by unscrewing the locking axle or screw mechanism
2. Once removed, the plate is able to revolve in either direction to ease the loading of the lines
3. Once loaded, return the plate to its original position and replace the locking axle or screw
4. Ensure the plate is properly locked back into place before use

[F] Pre-use Check

1. Check the body and moving mechanisms for any damage prior to use
2. Check for ease of movement with the plate and locking axle or screw

[G] Locking Mechanism

1. Locate Spring-loaded locking axle or screw atop the device
2. Push and twist locking axle or screw mechanism to release its grip
3. Free the locking axle or screw from opposing plate and revolve plate for access
4. Re-lock the pulley by re-aligning the locking axle or screw, push and turn to ensure a secure lock

[H] Applications

The pulley is designed for lowering loads in applications for arboriculture and NOT for Live Loads. The pulley should be used with a rigging system conforming to, or in accordance with any specific recognised industry best practice that dictates that the sling should be twice the strength of the working line.

CS

Český

[A] Pojmenování součástí

1. Zajišťovací mechanismus
2. Bočnice (hliník/ocel)
3. Štítek s informacemi o výrobku
4. Mezní pracovní zatížení
5. Rozsah průměrů lana
6. Minimální mez pevnosti
7. Varianta modelu
8. Sériové číslo a označení CE

[B] Péče a údržba**[C] Použití**

V ideálním případě by se toto zařízení mělo používat svisle ke kmeni.

1. Maximální průměr lana je v rozsahu 13–19 mm, jak je uvedeno na výrobku.
2. Zajistěte, aby byly obě bočnice zavřené a zajištěné na místě pomocí pružinové zajišťovací osy nebo šroubového mechanismu.
3. V případě potřeby zajistěte, aby byla pružinová zajišťovací osa pevně usazena v pojistné drážce. Podobně zajistěte, aby byl šroub před použitím úplně zajištěný.
4. K zařízení jsou připojena dvě lana – vrchní závěs (nahore) a pracovní lano (dole).

[D] Chybné použití

Výrobek je určen k použití jako součást vázacího systému, především v oblasti kultivace dřevin. NENÍ určen k používání s pohyblivými břemeny.

1. Nepoužívejte zařízení, které se opírá o výčnělky stromů nebo je nakloněné.
2. Zajistěte, aby byla pružinová zajišťovací osa pevně usazena v drážce.
3. Nepřetěžujte pracovní lano, protože by mohlo dojít k poškození a následnému narušení bezpečnosti zařízení.
4. Zajistěte, aby byla pružinová osa nebo šroubový mechanismus během používání na straně, která se nedotýká stromu.

[E] Ovládání bočnice

1. Uvolněte bočnici tak, že odšroubujete zajišťovací osu nebo šroubový mechanismus.
2. Po uvolnění bude možné otáčet bočnici v obou směrech, aby se usnadnilo zavádění lan.
3. Po zavedení lan vraťte bočnici do původní polohy a opět zajistěte zajišťovací osu nebo šroub.
4. Před použitím se ujistěte, že bočnice je opět náležitě zajištěná.

[F] Kontrola před použitím

1. Před použitím zkontrolujte tělo a pohyblivý mechanismus, zda nejsou poškozené.
2. Zkontrolujte, zda se bočnice a zajišťovací osa nebo šroub mohou volně pohybovat.

[G] Zajišťovací mechanismus

1. Lokalizujte pružinovou zajišťovací osu nebo šroub v horní části zařízení.