

BUCKINGHAM


Instructions / Warnings

PN 35033 Series Climber Footplate

Warning: Do not use this product if you cannot understand and follow the instructions and warnings that come with it and complete all necessary functions.

Buckingham Climber Footplates are designed to provide maximum comfort to the user while using Buckingham MFG Climbers. Two plates, both with a rubber sole that face down, fasten together on the climber stirrup with two screws and two star washers. Each footplate is specially designed to fit the left or right climber.

35033 Foot Plates are designed to fit most Steel and Titanium Climbers.
350331 Foot Plates are designed to fit most Aluminum Climbers.

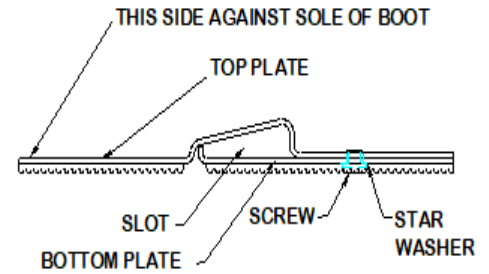

35033

350331



ATTACHMENT METHOD: Installing on Climber

1. Using a flat-head screwdriver, remove the bottom plate from the complete footplate assembly by removing the two screws. (Figures 1A and 1B)
2. Match climbers (left and right) to the corresponding footplate.
3. Place the climber stirrup into the slot of the top plate. (Figure 2)
(For PN 350331 only, ensure the two included shims are placed in between the footplates (as pictured above) when assembling around climber stirrup.)
4. Align the bottom plate holes to the top plate holes and insert the two screws making sure the star washers are between the screw head and bottom plate, ensure screws are tightened. (Figures 1A and 1B)



Two added shims that fit in between footplates to fit thicker Aluminum Climber Stirrup

Fig. 1A

Fig. 1B

Fig. 2

Climber Stirrup
(Underneath footplate)

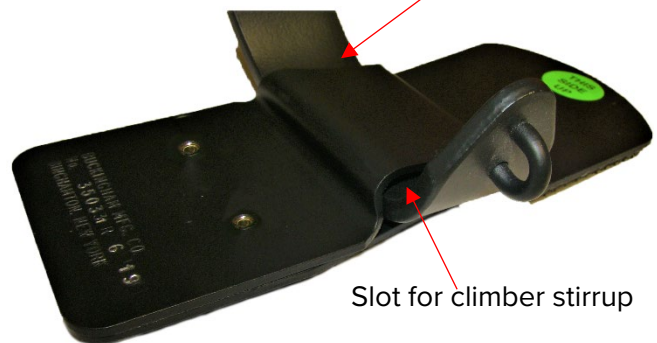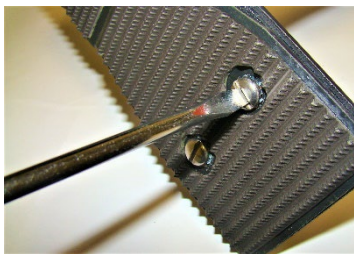

CAUTIONS:

- The rubber sole is **not** intended for dielectric protection, but to prevent the metal bottom from sliding on stone and ice.
- The footplate is **not** designed for walking. OSHA states “climbers are to be removed when going from pole to pole”.
- USE 35033 FOOTPLATES ONLY WITH STEEL AND TITANIUM CLIMBERS THAT PROPERLY COMPLEMENT.
- USE 350331 FOOTPLATES ONLY WITH ALUMINUM CLIMBERS THAT PROPERLY COMPLEMENT.
- Climbers must be inspected daily for wear due to abrasion from footplate movement.
- Please consult with your physician prior to using this product. Do not use this product under the influence of drugs or alcohol.

NOTE: Ensure proper fit of product before use. This product cannot be returned unless it is in new / unused condition.

STATEMENT of OBSOLESCENCE:

Precise “useful life expectancy” or “shelf life” for this product is not specified, as the degree of use, conditions of use, and the degree of care and storage determines useful life. All users maintain responsibility to select proper equipment for the job, be properly trained in its use, and ensure all personnel support equipment passes inspection before each use. Upon evidence of defects, damage or deterioration, all equipment shall be removed from service immediately and tagged or marked as unusable or destroyed. Additionally, all equipment shall be inspected on a regular basis not to exceed one year by a Competent Person, as defined by OSHA/ANSI, to verify that the equipment is safe for use. In the event of any question or concern regarding the condition of such equipment, users shall remove the equipment from service for further inspection. All users must comply with OSHA/ANSI/ASTM standards prior to and in using such equipment. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

INTERNATIONAL USERS:

Notwithstanding the above, please know that certain international jurisdictions require manufacturers of equipment to provide customers with a maximum useful lifespan (sometimes referred to as a “Statement of Obsolescence”). To the extent required, Buckingham personal protective equipment manufactured from synthetic fiber materials including but not limited to items such as webbing and/or rope are subject to a maximum useful lifespan of ten (10) years from the date of manufacture. As stated above proper usage, storage, maintenance, and care impacts the useful lifespan of equipment. Extreme circumstances may require that product must be retired after only one use. This statement is made in conformance and compliance with BS EN 365:2004. International users must ensure that product inspections are completed by Competent Persons as defined by international standards including but not limited to British Standard (“BS”). If equipment fails any inspections, it must be immediately withdrawn from service and destroyed. For more information regarding safe and appropriate use of equipment, please contact Buckingham Manufacturing at 1-800-937-2825.

OUR GUARANTEE:

We guarantee the equipment we manufacture to be free from defects in material and workmanship. We will repair any equipment deemed to be defective which is returned to us by the original purchaser. However, this guarantee is void if any product is changed or altered in any way, or if the product is used in a manner other than for which it is intended. This express guarantee supersedes all other expressed or implied guarantees, obligations or liabilities. There are no implied warranties of merchantability or fitness for a particular purpose and as such, all implied warranties are specifically disclaimed.

LIMITATION ON LIABILITY:

In no event will Buckingham or buyer be liable to the other for lost revenues, lost profits or any other indirect, consequential, special or punitive losses or damages, however caused, whether in action for breach of contract, strict liability, tort, or otherwise, even if advised of the possibility of such losses or damages. In no event will Buckingham’s liability exceed the total amount paid by the buyer to Buckingham for the product or equipment giving rise to such claim(s).

Please see other terms and conditions relating to this product at <https://buckinghammfg.com/terms-conditions/>

REGISTRATION:

Before use of the product, ensure to register and confirm the product at www.buckinghammfg.com/register.

BUCKINGHAM MFG.
BINGHAMTON, NY
1-800-937-2825
www.buckinghammfg.com